

# Starlite QL Instructions

The following steps are covered in this instruction:

- Connecting Swivel Mount to Starlite QL Head
- Putting Starlite connector on Starlite QL Head
- Putting assembly on LiteStand
- Inserting Starlite Lamp
- Connecting power cord



Figure 1

## Starlite QL Components

Note: Lamp is available separately.

Note: Connector is available separately.

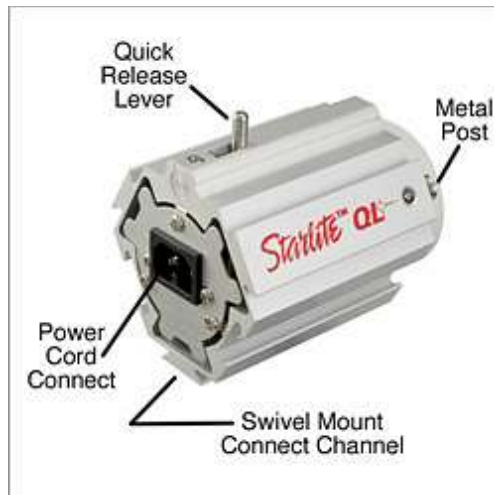


Figure 2

On the Starlite QL head, note the locations of the Swivel Mount connect channel, the locking pin and quick release lever (lock release lever), the three metal posts, and the power cord connector.



Figure 3

The metal posts on the front of the Starlite QL seat inside the connector's center plate cutout notches.

The spring-driven locking pin will securely lock the Starlite QL head to the connector.



Figure 4

On the Swivel Mount, note the locations of the swivel pivot locking handle, the Starlite head locking knob, and the LiteStand locking knob.

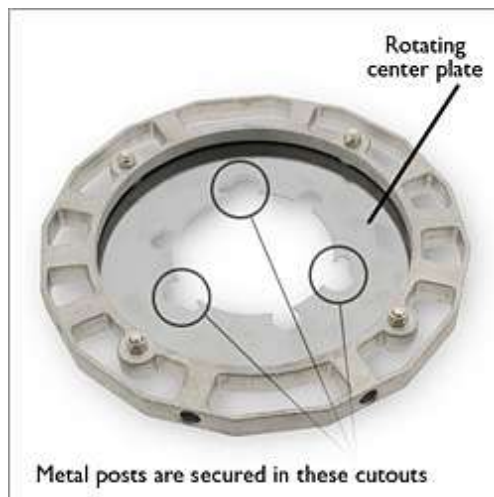


Figure 5

On the Starlite Connector, note the rotating center plate and its cutout for mounting.

### Connecting Swivel Mount to Starlite QL Head



Figure 6

Position Swivel Mount to rear of Starlite's Swivel Mount channel.



Figure 7

Slide Swivel Mount into Starlite's Swivel Mount channel. Center in position.



Figure 8

Hand-tighten channel lock knob.

### **Attaching the Starlite QL Head to the Starlite Connector**

Before assembly is mounted onto a LiteStand, we recommend building your softbox with the connector first. The Starlite QL Head can then be connected to the softbox and Starlite Connector.

(For softbox assembly instructions, go to the softbox product page and click on the assembly instructions link.)

Place the constructed softbox face-down onto a clean surface.



Figure 9

Position front of Starlite Head facing rear of Starlite Connector.



Figure 10

The metal posts of the Starlite QL head fit into the cutouts on the connector's center plate.



Figure 11

Insert the Starlite QL Head into the Starlite Connector with these metal posts entering the broad cut-out ends of the connector's center plate.

Hold the connector's centerplate firmly with thumb and index finger.



Figure 12

Turn the Starlite QL head about 1/8 of a turn until the locking pin locks into position.



Figure 13

The spring-driven locking pin will automatically lock into position, securing the Starlite QL head to the connector.

**NOTE:** To disconnect the light head from the connector, pull back on the locking pin release lever while turning the Starlite QL head.



Figure 14

Figure 14 shows the release lever being pulled back to unlock the Starlite head from the Starlite Connector.



## Mounting to a LiteStand



Figure 15

The assembly is ready to mount on a LiteStand.

With the LiteStand securely in place, position the Starlite QL assembly over the LiteStand post.



Figure 16

Place the Swivel Mount LiteStand receptacle onto the LiteStand post.



Figure 17

Secure in place by hand-tightening the lock knob to the LiteStand.



Figure 18



Figure 19



Figure 20

### **Inserting the Starlite Lamp**



Figure 21

The Starlite lamp can be inserted into the Starlite QL head through the front of the softbox. Remove the front diffuser and inner baffle, if necessary.



Figure 22

Screw lamp into Starlite QL head.

### **Connecting the Power Cord**



Figure 23

Connect the power cord to the rear of the Starlite QL.



Figure 24

Plug the cord into your power supply. Rocker switch on power cord turns light on and off.

